

DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter *01 to know the IP address.

- **Configuration** :

- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).



Summary												
Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	Reset
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	Reset
3	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
4	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
ALL												Reset

- Set Basic VOIP settings

简体中文

EasyPhone GoIP4

SIP

Config Mode: Single Server Mode

Phone Number: goip

Display Name:

Authentication ID: goip

Password: ****

SIP Proxy:

SIP Registrar: 192.168.1.17

Re-register Period (s): 10

Outbound Proxy:

Home Domain:

Backup Server: Enable Disable

Routing Prefix: Line1 Line2 Line3 Line4

Line 1 Routing Prefix:

*Auto Config Other lines

Save Changes

- Set Call IN settings

The screenshot shows the EasyPhone GoIP4 configuration interface. At the top, there is a header with the 'EasyPhone GoIP4' logo and a language selector for '简体中文'. A left sidebar contains a navigation menu with categories: Status, Configurations, Call In, Call In Auth, SIM, SIM Forward, IMEI, SMS, GSM Carrier, GSM Base Station, and Tools. The 'Call In' section is currently selected and expanded, showing the following settings:

- User No Input Timeout(s): 80
- CID Forward Mode: Use CID as SIP Caller
- CID Prefix: (empty field)
- Call IN via GSM: Enable Disable
- Forwarding to VoIP Number: 33005101410
- Dial Plan: (empty field)
- GSM Call Waiting: Disable
- Hunt Group Mode: Disable
- Auto Incoming Call Block: Enable Disable

A 'Save Changes' button is located at the bottom of the configuration area.

- Set Call OUT settings



• **Voximal Configuration :**

SIP incoming/outgoing trunk

```
[general]
Trunk Name: goip (for example)
Outbound CallerID: (SIM phone number)

[Outgoing Settings]
Trunk Name: goip (for example)
PEER Details:
  type=peer
  host=dynamic
  username=goip
  secret=****
```

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

<https://wiki.voximal.com/doku.php?id=voipproviders:dbi>

Last update: **2016/07/05 22:26**

