

DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter *01 to know the IP address.
- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).

The screenshot shows the 'EasyPhone GoIP4' web interface. At the top right, there is a language selector for '简体中文'. The main content area displays a 'Summary' table with the following data:

Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	<input type="button" value="Reset"/>
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	<input type="button" value="Reset"/>
3	N	N	N	N	IDLE	N				1234	NO LIMIT	<input type="button" value="Reset"/>
4	N	N	N	N	IDLE	N				1234	NO LIMIT	<input type="button" value="Reset"/>
ALL												<input type="button" value="Reset"/>

On the left side of the interface, there is a navigation menu with the following items: Status, Summary, General, GSM, SIM Call Forward, Configurations, and Tools.

- **Configuration** :

SIP incoming trunk

```
[general]
Trunk Name: ovh-in (for example)

[Outgoing Settings]
```

```
Trunk Name: ovh-in (for example)
PEER Details:
  type=peer
  host=sipx.ovh.fr
  username=00339xxxxxxxx
  fromuser=00339xxxxxxxx
[Registration]

Register String: 00339xxxxxxxx:password@sipx.ovh.fr/00339xxxxxxxx
```

SIP outgoing trunk

```
[general]
Trunk Name: ovh-out (for example)

[Outgoing Settings]

Trunk Name: ovh-out (for example)
PEER Details:
  type=peer
  host=sipx.ovh.fr
  username=00339xxxxxxxx
  fromuser=00339xxxxxxxx
```

From:
<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:
<https://wiki.voximal.com/doku.php?id=voipproviders:dbl&rev=1467736900>

Last update: **2016/07/05 16:41**

