

# DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter \*01 to know the IP address.
- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).

The screenshot shows the 'EasyPhone GoIP4' web interface. At the top right, there is a language selector for '简体中文'. On the left, a navigation menu includes 'Status', 'Summary', 'General', 'GSM', 'SIM Call Forward', 'Configurations', and 'Tools'. The main content area displays a 'Summary' table with the following data:

Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	<input type="button" value="Reset"/>
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	<input type="button" value="Reset"/>
3	N	N	N	N	IDLE	N				1234	NO LIMIT	<input type="button" value="Reset"/>
4	N	N	N	N	IDLE	N				1234	NO LIMIT	<input type="button" value="Reset"/>
ALL												<input type="button" value="Reset"/>

- Set Basic VOIP settings

简体中文

### EasyPhone GoIP4

**SIP**

Config Mode:

Phone Number:

Display Name:

Authentication ID:

Password:

SIP Proxy:

SIP Registrar:

Re-register Period (s):

Outbound Proxy:

Home Domain:

Backup Server:  Enable  Disable

Routing Prefix:  Line1  Line2  Line3  Line4

Line 1 Routing Prefix:

- Set Call IN settings

The screenshot shows the EasyPhone GoIP4 web interface. At the top right, there is a language selector for '简体中文'. The main content area is titled 'Call In' and contains the following configuration options:

- User No Input Timeout(s): 80
- CID Forward Mode: Use CID as SIP Caller
- CID Prefix: (empty field)
- Call IN via GSM:  Enable  Disable
- Forwarding to VoIP Number: 33005101410
- Dial Plan: (empty field)
- GSM Call Waiting: Disable
- Hunt Group Mode: Disable
- Auto Incoming Call Block:  Enable  Disable

A 'Save Changes' button is located below the configuration options. On the left side, there is a navigation menu with the following items:

- Status
- Configurations
  - Preferences
  - Network
  - Basic VoIP
  - Advance VoIP
  - Media
  - Call Out
  - Call Out Auth
  - Call In**
  - Call In Auth
  - SIM
  - SIM Forward
  - IMEI
  - SMS
  - GSM Carrier
  - GSM Base Station
- Tools

- Set Call OUT settings



- **Configuration SIP trunk in voximal :**

**SIP incoming/outgoing trunk**

```
[general]
Trunk Name: goip (for example)
Outbound CallerID: (SIM phone number)

[Outgoing Settings]
Trunk Name: goip (for example)
PEER Details:
  type=peer
  host=dynamic
  username=goip
  secret=****
```

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

<https://wiki.voximal.com/doku.php?id=voipproviders:dbl&rev=1467757532>

Last update: **2016/07/05 22:25**

