

# DIDx Incoming calls


- **Web site** : <https://www.didx.net/>

DID Exchange is a VOIP-based wholesale DID Phone Number marketplace which can and is used by Mobile Operators, LECs, CIECs, IXC's or other telecommunications service providers who offer or use any kind of PHONE NUMBERS in there network.

DIDx offers only inbound call services for DID's. You have a mounthly fee (some dollars), and a volume of minutes, if you overlap this you pay the call durations.

- **Configuration** :

By default the Voxibot installer create an account to receive external incoming calls. You need to get the password of the instance (voximal show licence). In the DIDx interface after purchased a DID number go to the configuration panel and set :

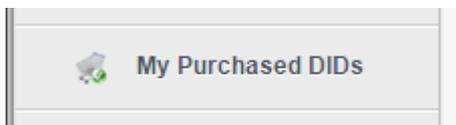

Change the RingTo :

A screenshot of the "Edit Ring To Address" configuration panel. It shows a form with several fields and radio buttons. The "Current IAX" field is highlighted in yellow and contains "access:[redacted]@lab.ulex.fr/0001". Below it, there are three radio buttons: "New SIP" (unselected), "New IAX" (selected), and "Default" (unselected). The "New IAX" field is highlighted in yellow and contains "access:xxxxxxxx@lab.ulex.fr/0001". Below the "Default" radio button, there is a link "1 Change Default RingTo". At the bottom, there is a "To Test DID" field containing "18005558355@tf.voipmich.com" and an "Update" button.

New IAX : `access:[your access password]@[your server IP]/[your DID to refere in the Voximal account]`

Note : If you have strict firewall rules enable the 4569 traffic from the DIDx list : [link](#)

From:  
<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:  
<https://wiki.voximal.com/doku.php?id=voipproviders:didx&rev=1473265726>

Last update: **2016/09/07 16:28**

