

DIDx Incoming calls


- **Web site** : <https://www.didx.net/>

DID Exchange is a VOIP-based wholesale DID Phone Number marketplace which can and is used by Mobile Operators, LECs, CIECs, IXCs or other telecommunications service providers who offer or use any kind of PHONE NUMBERS in there network.


DIDx offers only inbound call services for DIDs. You have a mounthly fee (some dollars), and a volume of minutes, if you overlap this you pay the call durations.

- **Configuration** :

By default the Voxibot installer create an account to receive external incoming calls. You need to get the password of the instance (voximal show licence). In the DIDx interface after purchased a DID number go to the configuration panel and set :

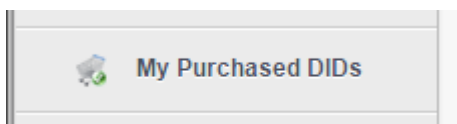

Change the RingTo :

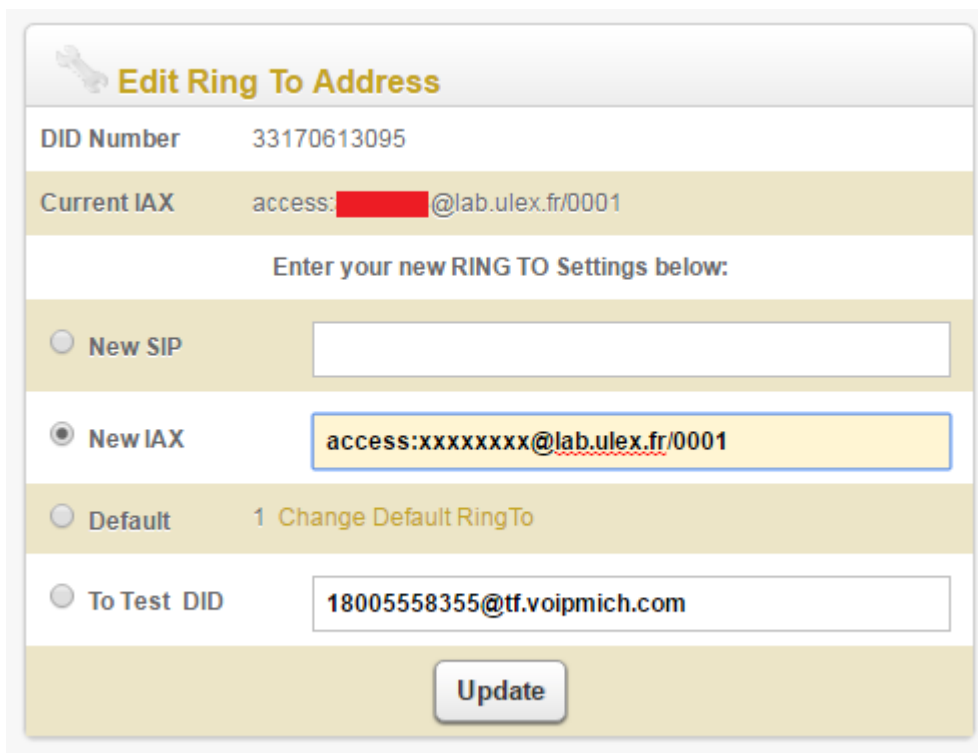

The screenshot shows the 'Edit Ring To Address' configuration panel. It includes a 'DID Number' field with the value '33170613095'. The 'Current IAX' field shows 'access:[redacted]@lab.ulex.fr/0001'. Below this, there is a section titled 'Enter your new RING TO Settings below:' with four radio button options: 'New SIP' (unselected), 'New IAX' (selected), 'Default' (unselected), and 'To Test DID' (unselected). The 'New IAX' option has a text input field containing 'access:xxxxxxxx@lab.ulex.fr/0001'. The 'Default' option has a sub-label '1 Change Default RingTo'. The 'To Test DID' option has a text input field containing '18005558355@tf.voipmich.com'. At the bottom of the panel is an 'Update' button.

New IAX : access:[your access password]@[your server IP]/[your DID to refere in the Voximal account]

Note : If you have strict firewall rules enable the 4569 traffic from the DIDx list : [link](#)

From:
<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:
<https://wiki.voximal.com/doku.php?id=voipproviders:didx&rev=1473265726>

Last update: **2016/09/07 16:28**

