

Configuration

Configuration file: vxml.conf

The configuration file is `/etc/asterisk/vxml.conf`. It is editable by typing:

```
# vi /etc/asterisk/vxml.conf
```

The `vxml.conf` file is divided in several sections to set different group of parameters and functions:

```
; commented text starts with a ";"

[general]
...

[control]
...

[license]
...

[account1]
...

[account2]
...

[accountn]
...
```

NOTE:

Please note that before configuring the Asterisk Module, you should make a backup copy of `vxml.conf`. Vxi upgrade process keep the current configuration but some specific updates can be mandatory for future releases.

Configuration summary table

All the parameters are detailed in the sections following the tables.

General Section [general]

The following section covers general functions of VoiceXML Asterisk module.

Key	Values	Default	Purpose
msqkey*	decimal number	1973	Message queue ID.
msqfactor*	value in Kbytes	10	Size by VoiceXML channel allocated for the message queue.
msqfirsttimeout*	value in milisecondes	100	First timeout, the next ones are set to 0.5s, setting lower value can increase the reactivity of the browser.
msqtimeout*	value in secondes	30	Timeout when the module not receive commands from the VoiceXML browser (can stop the Asterisk if autoexit set to yes).
msqsize*	auto or value in Kbytes	auto	Size of the message queue or if auto msqfactor x number of VoiceXML channels.
msqlock*	yes/no	no	Force to wait and disable the timeouts.
debug	yes/no/full	no	Enable or disable the logs from the Asterisk module and the VoiceXML Browser.
paramseparator*	character	,	Separator for Asterisk application parameters.
systemname	auto/value string name	(empty)	Empty not change the systemname (used in the uniqueID for the CDR), auto use the hostname of the server or set a string to define the system name.
autoanswer	yes/no/prompt/recognize/ringing/	yes	yes, answer the call with the vxml() execution, no never answer the call you need to call the Answer() application from the VoiceXML, prompt answer before first prompt/audio play, recognize answer before first recognize action, ringing no answer send a single audio frame to cancel the ringing tone.

Key	Values	Default	Purpose
autohangup	yes/no/soft/exit	no	yes execute hangup() a the end of the vxml() execution, soft execute softhangup(), exit execute hangup() and set the variable VXML_EXIT with the VoiceXML exit value.
autoexit	yes/no	no	Stop the Asterisk with return code -1, if VXL interpreter no answer (msq timeouts).
monitor	yes/no/old/1..100	no	yes execute mixmonitor() (or monitor() if old) before starting the VoiceXML session. You can set a random value (using a %).
monitordirectory	directory	mixmonitor directory	Set the mixmonitor() monitor() directory or use the default one (/var/lib/asterisk/monitor).
monitorformat	wav/gsm/pcm/ulaw/alaw	wav	Set the format for the mixmonitor recording.
defaulttimeout	value in milisecondes	5000	Default timeout if not set in the VoiceXML syntax.
defaultinterdigittimeout	value in milisecondes	3000	Default interdigit timeout if not set in the VoiceXML syntax.
priorityevents	yes/no	yes	If using single DTMF events and DTMF inputs/grammars, yes force to check the first DTMF to the DTMF events as soon as it is receive, no will wait full entering or a timeout.
tdd*	yes/no	no	yes enable TDD () to send and receive text messages.
keepcontext*	yes/no	yes	yes force to keep the VoiceXML channel during the consultation transfer.
video	yes/no	no	refer to Lience options
speech	yes/no/automatic/emulation	no	refer to Lience options
video	yes/no	no	refer to Lience options
dialer			refer to Lience options
rtmp			refer to Lience options
voicexml			refer to Lience options

Key	Values	Default	Purpose
messaging*	yes/no/database	no	yes allows to control the messaging counters as local context value. database use the Asterisk internal database to store the counters values.
priority*	value priority	0	if set us the priority at the end od the vxml() execution.
removeprompts*	yes/no	yes	yes allows remove the prompts after their play or processing. no is for debugging.
autoreload	yes/no	no	yes Can for to automatically reload the configuration if the configuration file date has changed.
recordsendaudio	yes/no	no	yes force the VoiceXML module to send audio silence during the recording. Some operators can close the call is there is no audio traffic during the recording.
recordsendvideo	yes/no	no	yes forec the VoiceXML module to send back to the user its own video during the video recording (as an echo test).
recordsilence	yes/no/value milliseconds	yes(300)	yes allows to record this time before the VAD detection. no force to record all the audio without waiting for the voice detection. You can set a value in milisecondes.
recordtotext*	url	empty	If record type="text/plain", use this URL to convert speech to text (as Google)
recorddirectory	directory	/tmp/cacheContent	Default temporary directory for recording
recordrewind	yes/no	yes	Strip off the last 1/4 second of the audio records.
threshold	dsp/default/number	default	Set the default threshold for silence detection.

Key	Values	Default	Purpose
videoupdate	yes/no	yes	Request a video update before recording.
audiosilence*	no/file	no	Play an audio file during silences.
cachedirectory	directory	/tmp/cacheContent	Cache directory for audio memory, MRCPsynth, record, builtin grammars...
tttdirectory	directory	/tmp/cacheContent/	TTS cache directory, used to purge old files (greater the maxage parameter).
videosilence*	no/file	no	Play an video file during silences.
wavcodec	pcm/gsm		Codec use for record
videocodec*	h263/h263p		Deprecated
dialformat	string	%s	Format string used to generate outgoing calls (allows to set the channel type and peer for example)
dialformatvideo	string	%s	Format string used to generate outgoing video calls (allows to set the channel type and peer for example)
dialnumbersonly	yes/no	no	Filter to suppress non numeric charaters
nomaskerade	yes/no	no	For video calls add /nj for video calls
videoprofile	string	empty	Set the variable VXML_VIDEO_CODEC used by the default transcoder dialplan
blindapplication	transfer/	none	To generate a SIP REFER, set a <transfer bridge="false" .../> and this parameter to "transfer"
localformat	spawn/bridge/nooptimization/jitter	spawn	Set the mode to transfer to local the dialplan
localextension	string	vxml	Set the default extension for local transfers
conferenceformat	string	empty	Specific parameter for the conference application.
celudanurl*			deprecated
speechprovider	unimrcp/verbio/lumenvox/string	empty	Set the Speech module (ASR) provider.
speechdirectory	directory	/tmp/cacheContent	Directory to generate temporary grammars (buitins for example).

Key	Values	Default	Purpose
speechscore	1-100	20	Minimal score to forward the speech result o the interpreter.
speechfactor	-x/+x	0	Parameter to multiply or divide the result from the speech engine.
speechforcescore*	0-100	0	Force a speech score (debug only)
speechforceresult*	string	empty	Force a speech value (debug only)
speechforcename*	yes/no	no	Add a 'V' for the grammar name, only for old Vestec engines
speechhotwordscore	0-100	0	If score is lower than this value, the module restart the recognition
speechbargain	yes/no/forced/enhanced	no	Force the prompt bargain mode for the speech.
speechmaxresults	number	1	Max results returned when it use Asterisk speech module.
speechtimeout			
speechmaxtimeout			
speechconcatenate	yes/no	no	Concatenate multiple speech results for Verbio.
speechrecord	yes/no	no	Record Speech sessions (wav) and results (txt) (for debug)
speechrecorddirectory	directory	/tmp/cacheContent	Directory to generate temporary speech recordings.
speechunload	yes/no	yes	Disable the Speech unload (some ASR engine not support to set empty grammars contents to free the loaded grammars.
speechurl*	url	empty	not implemented
speechbeepstart*	file	empty	not implemented
speechbeepstop*	file	empty	not implemented
cli	yes/no	no	Allows to execute CLI commands form the VoiceXML syntax (audio src="cli:command")
urldecode	yes/no	no	Decode VoiceXML first URL.
cdrupdate	yes/no	no	Allows to modify all the CDR fields
cdrexist	yes/no	no	Use the VoiceXML exit value to set the CDR userfiled

Key	Values	Default	Purpose
cdrdial	yes/no	no	Generate a CDR with the transfered call.
cdroverwrite	yes/no	no	Overwrite the local/remote call numbers (with the values managed the VoiceXML VXML_LOCAL, VXML_REMOTE...)
cdrparam	yes/no	no	Use the VXML_PARAM to set the CDR userfield
cachetimeout	number	60	Execute the cache process each x seconds.
cachehour	number	-1	Execute the cache process at a defined hour.
cachemaxage	number	-1	Remove cache file older than maxage seconds.
cachemaxremoves	number	-1	Max removed files for each execution process.
loadlibrary*	library		Deprecated
loadcli	string	empty	Execute a specific CLI command when the module is loaded.
originatedelay	number	10000	Time to wait before dial in milliseconds.
originatedelay2	number	10000	Time to wait before dial the second time n milliseconds.
requesturl*	URL	empty	URL for the billing HTTP/API.
countermax*	number		Deprecated
countermin*	number		Deprecated
counterval*	number		Deprecated
audiowait	file	empty	Plays this file and waits for a free VoiceXML channel.
mrcpsynthparams	string	empty	Add extra parameters for the MRCPsynth application (volume, keep session...)

License Section [license]

The following section covers license information and keys of Vxi. To obtain a commercial valid license key for your copy of VoiceXML browser (for use more than one session), you should run asterisk and get your code by typing the following commands:

```
*CLI> vxml show license
```

Default License section (no key) allow to run any VoiceXML application with one free port.

Example:

```
[license]
max=1
key=
```

Example:

```
[license]
max=30
key=yourkey
```

Key	Values	Default	Purpose
max	number of channels	1	Max number of VoiceXML channels for this license.
texttospeech	yes/no	yes	Allows to use Text to Speech prompts.
video	yes/no	no	Allows to use Video options.
speech	yes/no	no	Allows to use ASR/Speech options.
dialer	yes/no	no	Allows to use the VoiceXML with external Dialer.
voicexml	yes/no	yes	A allows to use the VoiceXML browser execution.
expiration	date YYMMDD		Optional expiration date of the license
key	License key		Key after purchasing a official commercial license. If not set or wrong key, you have 1 trial VoiceXML channel.

Control

Key	Values	Default	Purpose
forward			
reverse			
stop			
pause			
restart			
skipms			

Account Section [account_]

The Vxi VoiceXML browser is designed to manage hosted VoiceXML services and share different applications thru different Inbound / Outbound phone lines. This will allow you to manage customers' accounts for VoiceXML hosted applications and control easily the capacity you need to assign to each one.

To create accounts, you need to add an [accountX] section (where "X" is a number 1-100) in the bottom part of the /etc/asterisk/vxml.conf file. Please find here three added accounts to manage different port capacity per application/URI:

Examples:


```
[account1]
name=voiceportal1
local=0099090
url=http://www.i6net.com/vxml/voiceportal1.vxml
max=25

[account2]
name=helloworld
local=0099090
url=http://www.i6net.com/vxml/helloworld/index.vxml
max=10

[account3]
name=localservice
local=0099090
url=http://localhost/vxml/test.vxml
max=51
```

The account properties are defined within sections. Each account has a specific section. The sections are named and numbered from account1 to account99 (maximum 100 accounts). The example below shows the functions in each account section.

```
[account1]
name=example
number=*3
url=http://.../index.vxml
urlvideo=http://.../index.vxml
max=5
speech=no
dialformat=SIP/%s
dialformatvideo=SIP/%s
```

Key	Values	Default	Purpose
name			
number			
url			
urlvideo			
max			
dialformat			
dialformatvideo			
dialnumbersonly			
force	y/n/video/audio/ulaw/alaw/flash/ringing/vxml/h263/h263p/h264		y=Video / n=audio
videoprofile			
speech	y/n/emulation/automatic/debug		
speechprovider			
speechscore			
speechfactor			
speechforcescore			

Key	Values	Default	Purpose
speechforcename			
mark			
durationlimit			
maxtime			
param			
application			
app			
wait			
volumetx			
volumerx			
audiodenied			
audiowait			

Logs

Key	Values	Default	Purpose
enable			
statsfilename			
logsdirectory			
split			

Monitor

Key	Values	Default	Purpose
enable			

General Section [general]

The following section covers general functions of VXI*.

debug= {0/1}

The default is 0, meaning no debug. If the function is set with a value greater than 0, the VoiceXML Asterisk application will generate debug traces.

autoanswer= {yes/no}

The default is yes. If set, the VoiceXML application will answer the Asterisk channel before starting the VoiceXML session.

autohangup= {yes/no}

The default is no. If set, the VoiceXML application will hangup the Asterisk channel at the end of the the VoiceXML session.

autoexit= {yes/no}

The default is yes. If set, the VoiceXML application will force the exit (with -1 return value) of the Asterisk if the connection with OpenVXI is lost.

defaulttimeout= {1..60}

You can set the default timeout value to allow for DTMF recognition, if not set from the VoiceXML syntax. In milliseconds (ms). The default value is 5s

defaultinterdigittimeout= {1}

The default interdigit timeout value can be set to allow for DTMF recognition, if not set from the VoiceXML syntax.

wavcode= {pcm/gsm}

This function allows you to configure the default codec for the record associated to the MIME type "audio/x-wav". You can select gsm or pcm. While the default codec is PCM, the audio files recorded could be too big to be easily posted to an HTTP server.

audiosilence= {filename}

The VoiceXML browser can loop and generate a sound during interaction phases. Enter the specified sound file in pcm format (you will need to omit the filename extension). Sound files are stored in the /var/lib/asterisk/sounds directory by default, however the directory path can be changed in asterisk.conf. The default value is no filename. This function is disabled in this release.

videosilence= {filename}

The VoiceXML browser can loop and generate a video clip during interaction and audio prompting. Enter the specified sound file in Asterisk Raw h263 format (you will need to omit the filename extension). Sound files are stored in the /var/lib/asterisk/sounds directory, however the directory path can be changed in asterisk.conf. The default value is no filename. This function is disabled in this release.

recordsilence= {yes/no}

The VoiceXML browser can generate an audio silence (RTP packet generated), during the recording phase. This feature has been added to prevent gateway hang-ups if the server does not generate packets during a configured period. If the video mode is selected, it is preferable to unset this option to generate a video echoing during the recording phase (like a mirror). The default value is no.

threshold= {1...32767}

This value is the minimum threshold, calculated by averaging all of the samples within a frame, for which a frame is determined to either be silence (below the threshold) or noise (above the threshold). This parameter is use to detect the record final silence. The default value is 256.

dialformat= {application parameters with %s}

This is a string to specify the interface and the peer that has been chosen for the transfer. The "%s" will be replaced by the string set in the <transfer> dest attribute. Remember to prefix the dest value with "tel:" to generate the transfer function. Other prefixes have been added to match some of the Asterisk functions, such as conference, call an application, etc. The default value is SIP/%s.

dialformatvideo= {application parameters with %s}

This function is like dialformat, but for a video transaction. The default value is SIP/%s.

blindapplication= {asterik application name or empty}

This is a string to specify the application used with the blind transfer mode. If the application is empty, the VoiceXML application will generate a Dial command with the transfer parameters after the VoiceXML session. The default value is 'transfer'.

video = {yes/no}

Enable or disable the video feature (controlled by the license key). The default value is no.

removeprompts= {yes/no}

The VoiceXML interpreter dynamically generates the files to be prompted in the /tmp directory. After prompting, you can choose to delete or keep the files as they can be overwritten by the new <prompt> sections. The default value is yes.

cachemaxage={-1 or 0-...} Indicates that the cache is willing to remove contents whose age are greater than the specified time in seconds (set the value -1, to disable the cache purge). The default value is -1, disabled.

cachetimeout={-1, 0-...} Cyclic cache check period in seconds (-1 or 0 to disable). The default value is -1, disabled.

cachehour={-1 or 0-23} Specific hour to check the cache and purge the older files (-1 to disable). The default value is -1, disabled.

autoreloadconfig= {yes/no}

Use this function to automatically update the configuration when the file is modified. The update is based on the configuration file date or you can initiate an update to the file at any time on your own. Be careful not to save incomplete configuration files. The default value is no.+

speech= {yes/no/emulation/automatic}

You can enable or disable the ASR (speech recognition) using the VoiceXML application. "Yes" means that the ASR resource will be allocated during the duration of the VoiceXML session. The "emulation" value is a permissive mode that always returns OK, even if the ASR is not present. The "automatic" value will allocate the speech resource if a creation grammar is asked by the VoiceXML interpreter. The speech resource will be released after all grammars are released. The default value is no.

speechprovider= {lumenvox/verbio}

You can set which speech recognition provider to allocate to the speech resource. When the default is empty, use the first option.

speechscore= {0...100}

The speechscore function allows you to set the confidence score of the speech recognition engine

(ASR). The default number is 50. When the VoiceXML Asterisk application gets an ASR result, the score is returned with the word or phrase recognized. If the score is low, this limiter value is used to return a no match error/event instead a wrong result.

speechforcedscore={0..100}

Force the score value returned to the VoiceXML interpreter. The default value is 0 (to disable the forcing).

speechdirectory= {directory file}

It is preferable to not set this parameter and let the VoiceXML application to get the default values. The directory file is where the built-in grammars are stored. For the Verbio ASR, the default value is "" (use internal Verbio builtins) For the LumenVox ASR, the default value is `"/var/lib/opensvx/grammars/ABNF_%s_%s.gram"` (ABNF grammars provided by I6NET).

speechunload= {yes/no}

Disable the call to the "speechunload" application when the grammars are free. Some providers don't support to send empty 'GRAMMAR-DEFINE'. The default value is yes (unload the grammars).

cdrupdate= {yes/no}

If value is set to yes, at the end of the VoiceXML session, the VoiceXML application updates the CDR information. The CDR is information generated for each call in order to get data statistics. After the update at the end of the VoiceXML session, the CDR will be locked. The default value is yes.

setapp = {"app_vxml" name}

App references the last Asterisk application executed, therefore the setapp value is set with the name of the last application. "App" is also a field of the CDR data.

setuserfield = {exit returned value}

This value is set from a VoiceXML result, specifically from the <exit>, "expr" attribute. "Userfield" is also a field of the CDR data.

accountcode= {VoiceXML account}

This function can be set with the name of the VoiceXML account, if an account was found and the updatecdr option is enabled.

cdrdial= {yes/no}

If value is set to "yes", the dial application used for the <transfer> will generate a new CDR. If set to "no", no CDR will be generated and the current CDR will be kept. The default value is "yes".

cdrprompt= {yes/no/all}

If value is set to "yes" and the property cdrprompt is set to "true" in the VoiceXML context, the audio/video prompts will generate a new CDR (duration is the duration of the prompt, DTMF indicate the prompt have been skipped by a DTMF, and HANGUP if the prompt is skipped by a hangup). If set to "no", no CDR will be generated (default value). If the value is set to "all", all the audio/video clips will generate CDRs. The default value is "no". The alias promptcdr is supported too (in the vxml.conf and

for the VoiceXML property name).

cdrconference= {yes/no/all}

If value is set to “yes” and the property cdrconference is set to “true” in the VoiceXML context, the conference transfers will generate a new CDR (duration is the duration of the conference user's session, DTMF indicate the conference have been skipped by a DTMF, and HANGUP if the conference is skipped by a hangup). If set to “no”, no CDR will be generated (default value). If the value is set to “all”, all the conference sessions will generate CDRs. The default value is “no”. The alias conferencecdr is supported too (in the vxml.conf and for the VoiceXML property name).

cdroverwrite= {yes/no}

If value is set to “yes”, the CDR field source and destination are overwritten with the contents of the variables VXML_REMOTE and VXML_LOCAL. The default value is “no”.

cdrspeech= {yes/no/all}

If value is set to “yes” and the property cdrspeech is set to “true” in the VoiceXML context, the ASR/speech will generate a new CDR (duration is the duration allways 0, NOINPUT, NOMATCH, and MATCH are the Lastdata values, the UserField will set with the best result and its score). If set to “no”, no CDR will be generated (default value). If the value is set to “all”, all the ASR/speech will generate CDRs. The default value is “no”. The alias speechcdr is supported too (in the vxml.conf and for the VoiceXML property name).

priorityevents= {yes/no} If value is set to “no”, the events (single DTMF) are not checked before the end of the full DTMF input, (if there is another complex grammar enabled, with a maxlength > 1). The default value is “yes”.

recorddirectory= {directory file} The directory file is where the records are stored. If you want to store locally the recordings, you can use the attribute dest in the tag <record>. Files with relative filenames where stored here. If you use the option 'mark' (from the account of the dialplan), the VXI module will create directories using the 'mark' and will store the files in this directories.

Control Section [control]

The control section describes the control functions that allow you to configure DTMF commands that stream a file with fast forward, pause, reverse, restart, etc. To enable a control during a prompt, you must first set the VoiceXML property name to equal “control, with a value of “yes.”

```
<property name="control" value="yes" />
```

This works only with GSM and WAV files - in all other cases the property is ignored.

forward= {DTMF(s)/empty}

Fast-forward when this DTMF digit is received. The default value is #.

reverse= {DTMF(s)/empty}

Rewind when this DTMF digit is received. The default value is *.

stop= {DTMF(s)/empty}

Stop when this DTMF digit is received. The default value is 0123456789.

pause= {DTMF(s)/empty}

Pause playback when this DTMF digit is received. The default value is empty.

restart= {DTMF(s)/empty}

Restart playback when this DTMF digit is received. The default value is empty.

skipms= {delay in milliseconds}

This is the number of milliseconds to skip when rewinding or fast-forwarding. The default value is 5000.

License Section [license]

The following section covers license information and keys of Vxi. To obtain a commercial valid license key for your copy of VoiceXML browser (for use more than one session), you should run asterisk and get your code by typing the following commands:

```
*CLI> vxml show license
```

Default License section (no key) allow to run any VoiceXML application with one free port.

Example:

```
[license]
max=1
key=
```

Example:

```
[license]
max=30
key=yourkey
```

Account Section [account_]

The Vxi VoiceXML browser is designed to manage hosted VoiceXML services and share different applications thru different Inbound / Outbound phone lines. This will allow you to manage customers' accounts for VoiceXML hosted applications and control easily the capacity you need to assign to each one.

To create accounts, you need to add an [accountX] section (where “X” is a number 1-100) in the bottom part of the /etc/asterisk/vxml.conf file. Please find here three added accounts to manage different port capacity per application/URI:

Examples:

```
[account1]
name=voiceportal1
local=0099090
url=http://www.i6net.com/vxml/voiceportal1.vxml
max=25

[account2]
name=helloworld
local=0099090
url=http://www.i6net.com/vxml/helloworld/index.vxml
max=10

[account3]
name=localservice
local=0099090
url=http://localhost/vxml/test.vxml
max=51
```

The account properties are defined within sections. Each account has a specific section. The sections are named and numbered from account1 to account99 (maximum 100 accounts). The example below shows the functions in each account section.

```
[account1]
name=example
number=*3
url=http://.../index.vxml
urlvideo=http://.../index.vxml
max=5
speech=no
dialformat=SIP/%s
dialformatvideo=SIP/%s
```

name= {string}

This function indicates the name or designation of the account. This reference can be used to identify the account used by the VXML application, Vxml(name of the account). This allows you to execute a VoiceXML session corresponding to the account values.

number= {called number}

This function allows the identification of an account with the called number, signaling information from the ANI function, CALLERID(). You can use the “*”, the wildcard character, to specify a substring such as *03 or 014612*, that the number function will contain. You can start the number with “_” to use Asterisk Diplan Patterns too (see : <http://www.voip->

info.org/wiki/view/Asterisk+Dialplan+Patterns). The function can also be used to identify the account, like the name, Vxml(number of the account). You can start the number with “@” to match the caller number to the account number (use the same syntax as the called number There is a way to)

url= {voicexml URL}

This function indicates the VoiceXML URL of the account.

urlvideo= {voicexml URL}

This function defines the Video VoiceXML URL of the account. The call is identified as a video call by the set codecs or the function CHANNEL(transfercapability)=VIDEO.

max= {0...120}

This indicates the maximum number of sessions allowed to this account. If there are not enough sessions then the VoiceXML application will generate an error.

dialformat= {application(/%s[])}

This is similar to the general function, but for the account only. If not set, use the general value.

dialformatvideo= {application(/%s[])}

This function has the same purpose as the dialformat, only for video sessions.

force= {video/audio}

If set to video, set the Transfercapability to VIDEO (and enable the h324m processing). If set to audio, the Vxml application execute directly the account URL and bypass the redirection execution (parameter with '@').

speech= {yes/no/emulation/automatic}

This speech function is as the general function, but for the account only. If not set, use the general value.

speechprovider= {lumenvox/verbio}

This speech function is as the general function, but for the account only. If not set, use the general value.

speechscore= {0..100}

This speech function is as the general function, but for the account only. If not set, use the general value.

speechforcedscore= {0..100}

This speech function is as the general function, but for the account only. If not set, use the general value.

mark= {string/@local/@remote/@id/@param}

Set a string mark in the VoiceXML browser traces. The session ID and this string will be added to the channel number column (3rd) in the traces (Example : ...|33|... → ...|33_1_user1|...). Four redirection exist :

```
@remote : caller number
@local : called number
@id : VoieXML id parameter value
@param : VoiceXML parameter value
```

durationlimit= {0...}

This indicates the maximum duration in seconds for the session using this account. The call will be hangup after this maximal duration.

Configuration example

Example:

```
; VoiceXML Configuration
;
[general]
wav_codec=gsm
videosilence=;silence
audiosilence=;silence
debug=4
video=yes

[license]
max=100
key=...

[account1]
name=Test1
url=http://host.i6net.com/vxml/links/vxml/index.php
max=1

[account2]
name=Test2
url=http://www.mdfactory.com/mpm/camp/index.vxml
max=3
dialformat=SIP/%s@voztele-out
```

To assign an extension to a VXML account just follow this example, where we are assigning the previous account to three extensions number in your `/etc/asterisk/extension.conf` asterisk:

```
[default]
```

```
exten => 981001001,1,Vxml(Test1)
exten => 981001002,1,Vxml(Test2)
exten => 981001003,1,Vxml(Test3)
```

NOTE: When you update your vxml.conf file, remember to refresh configuration making a command "vxml reload" in your CLI*> prompt. If you have added SIP, PRI or new extensions you must launch "sip reload", "extensions reload", "dialplan reload" or reload asterisk/opensvix processes. Use the command "vxml show accounts" to dump your accounts.

```
CLI*> extensions reload
CLI*> vxml reload
CLI*> vxml show accounts
```

Example:

Add extensions to the Asterisk dial plan /etc/asterisk/extensions.conf, if you want to set the URL in the dialplan:

```
exten => 888,1,Answer
exten => 888,n,Wait(3)
exten => 888,n,Vxml(file:///root/example.vxml)
exten => 888,n,Hangup
```

You can create and edit the file /root/example.vxml with the GNU text editor, VI, for example.

This example will work if you have text-to-speech configured. If not, use a pre-recorded wav or gsm file to replace the "Hello world!" text by an <audio> tag. For more information, see the format extensions supported by Asterisk.

```
<?xml version="1.0"?>
<vxml version = "2.0" xmlns="http://www.w3.org/2001/vxml">
  <form>
    <block><audio src="hello.wav"/></block>
  </form>
</vxml>
```

Save the file in the same directory as the VoiceXML script (relative reference in this example). Reload the extensions configuration with:

```
*CLI> extensions reload
```

Call the service by calling:

```
SIP:888@<your server address>
```

Last
update:
2017/07/28 22:29 vxi_installation_guide:configuration:start https://wiki.voximal.com/doku.php?id=vxi_installation_guide:configuration:start&rev=1433527630

From:
<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:
https://wiki.voximal.com/doku.php?id=vxi_installation_guide:configuration:start&rev=1433527630

Last update: **2017/07/28 22:29**

