

Soft Phone connection

Set up a software telephone so that you can play with Voximal. We recommend Zoiper or YateClient which are free. Download them from :


- [laxLite](#) (old windows application)
- [Zoiper](#) (freeware with commercial offer)
- [YateClient](#) (opensource freeware)

Account datas :

- username : user
- password : (get it from the Voximal/Settings/Test)
- server : (the IP adress of your server)

Get your password from the Web Interface

Select Setting → Voximal Setting → Test

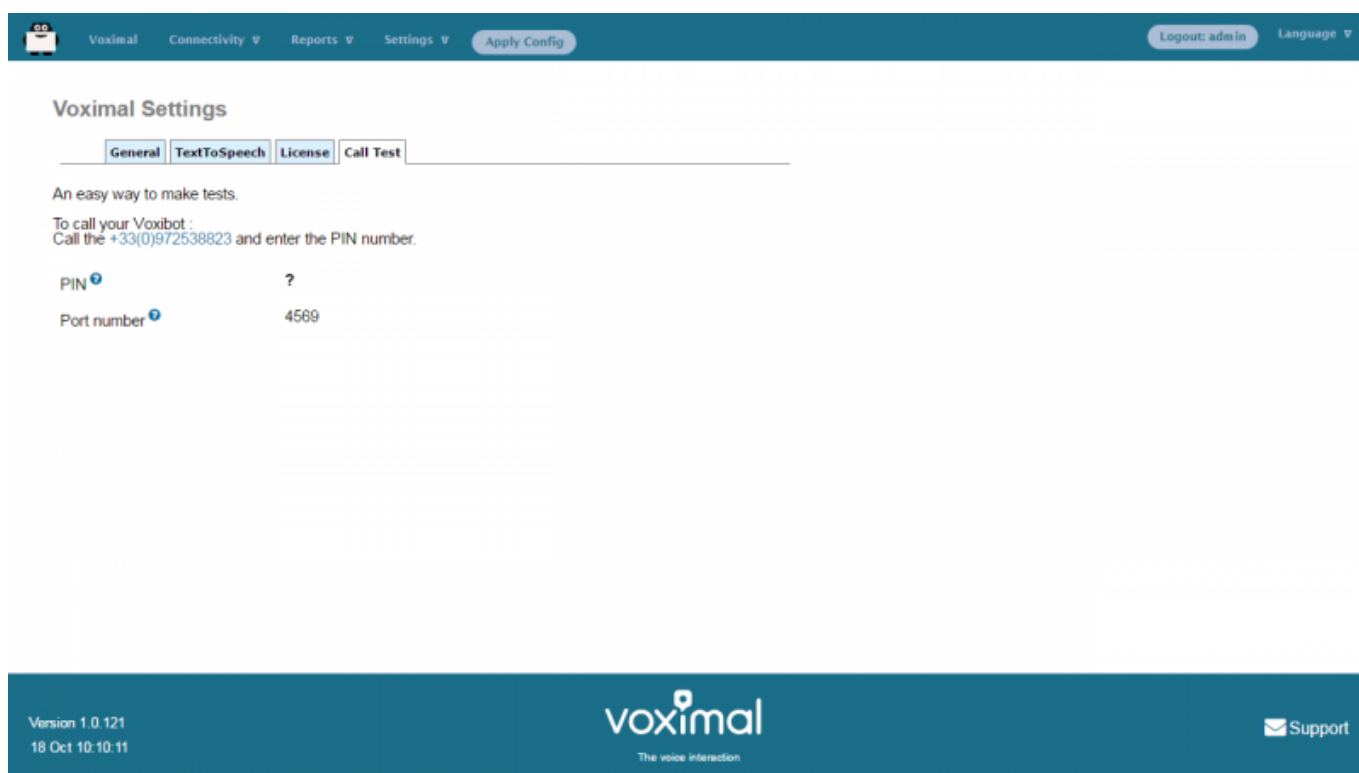

The screenshot shows the Voximal web interface. At the top, there is a navigation bar with links for 'Voximal', 'Connectivity', 'Reports', 'Settings', and an 'Apply Config' button. The 'Settings' section is expanded, showing 'Voximal Settings'. Below this, there are tabs for 'General', 'TextToSpeech', 'License', and 'Call Test'. The 'TextToSpeech' tab is active. The page contains the following text:

An easy way to make tests.
To call your Voxibot :
Call the +33(0)972538823 and enter the PIN number.

There are two input fields: 'PIN' with a question mark and 'Port number' with the value '4569'. Both fields have a help icon (i).

At the bottom of the page, there is a footer with the text 'Version 1.0.121 18 Oct 10:10:11', the 'voximal' logo with the tagline 'The voice interaction', and a 'Support' link with an envelope icon.

Get your password from the Asterisk console


Execute :

```
raspbx*CLI> voximal show license
Version      : V14.0
Build
CVS Revision : $Revision: 1.853 $
```

```
Gcc      : V4.9
Arch     : 32 bits
Target   : i686
Asterisk : V13.11.2
Options sum :
Date     : Nov  3 2016 21:40:06
Code     : b6de76bcb827eb415eb3b6f75b1001
UID      : cb773b52-a362-11e6-af57-b827eb415eb3
PIN      : 3152
Password : cb773b52
Key      :
Max sessions : 1
Options
  TextToSpeech : Yes
  Speech       : Yes
State       : ok
```

Your password is : **cb773b52**

laxLite

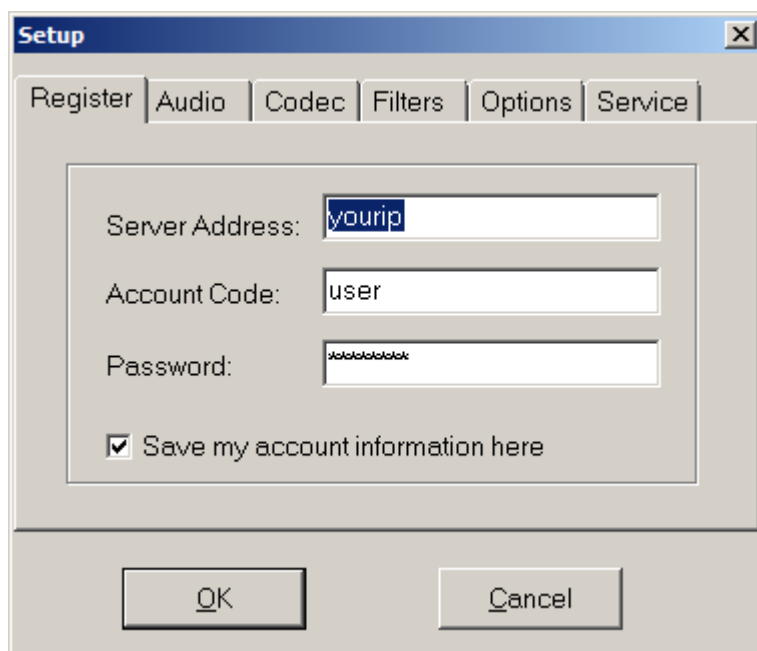

Voiper

YateClient

Run YateClient once you've installed it and enter the credentials for the user extension on Incredible PBX. You'll need the IP address of your server plus your extension user password. Choose Settings → Accounts and click the New button. Fill in the blanks using the IP address of your server, 'user' for your account name, and whatever password you created for the extension.

From:
<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:
https://wiki.voximal.com/doku.php?id=installation_guide:softphone:start&rev=1478509556

Last update: **2016/11/07 09:05**

