

Call the test service

You can test your Voximal installation by calling the test numbers from any phone.

We setup 2 phone numbers :

- France : +33(0)9 72 53 88 23
- Unites States : +1-202-600-4534

You need to open the port 4569 from/to the internet. The calls will be transfered by this way to your Voximal server to the number/extension :

- **8965** ('VXML' from your phone dialpad).


By default, the Voximal installation configures the 'helloworld' service/account that executes this VoiceXML document :

- [helloworld.vxml](#)

When you call the voice portal, the service will request your PIN number.

Get you pin from the Web Interface

Select Setting → Voximal Setting → Test

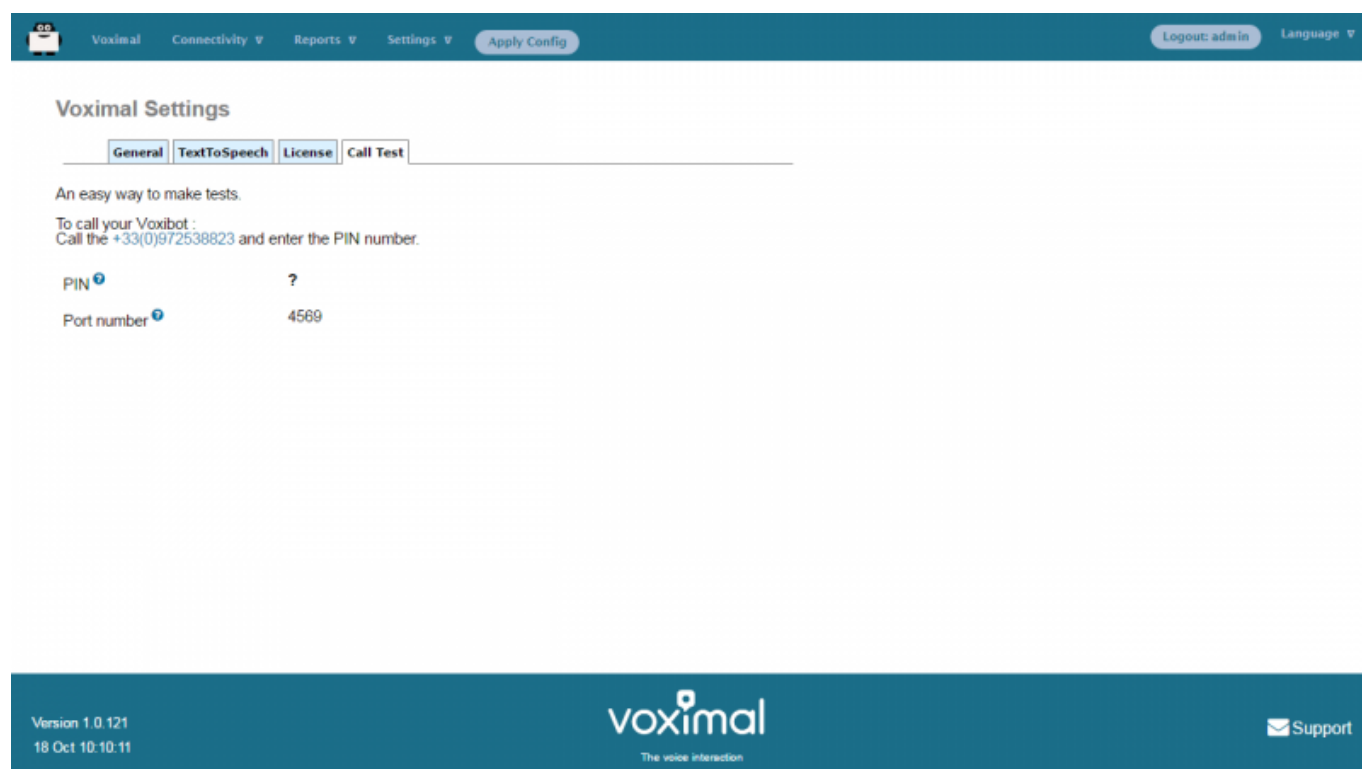

The screenshot shows the Voximal web interface. The top navigation bar includes links for Voximal, Connectivity, Reports, and Settings, along with an 'Apply Config' button and a 'Logout: admin' link. The main content area is titled 'Voximal Settings' and features four tabs: General, TextToSpeech, License, and Call Test. The 'Call Test' tab is active, displaying instructions: 'An easy way to make tests. To call your Voxibot : Call the +33(0)972538823 and enter the PIN number.' Below this, there are two input fields: 'PIN' with a question mark and 'Port number' with the value '4569'. The footer of the interface shows the version '1.0.121', the date '18 Oct 10:10:11', the Voximal logo with the tagline 'The voice interaction', and a 'Support' link.

Get you pin from the Asterisk console

Execute :

```
CLI> voximal show license
```

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

https://wiki.voximal.com/doku.php?id=installation_guide:test:start&rev=1478480320

Last update: **2016/11/07 00:58**

