

DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter *01 to know the IP address.
- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).



The screenshot displays the 'EasyPhone GoIP4' web interface. On the left is a navigation menu with options: Status, Summary, General, GSM, SIM Call Forward, Configurations, and Tools. The 'Status' section is active, showing a 'Summary' table with 13 columns: Line, M, SIM, GSM, VOIP, Status, SMS, RSSI, Carrier, BST ID, Idle, Remain, and Reset. The table contains 5 rows of data for lines 1 through 4, and an 'ALL' row. Each row has a 'Reset' button in the final column. The top right of the interface has a language selector set to '简体中文'.

Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	Reset
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	Reset
3	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
4	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
ALL												Reset

- **Configuration** :

SIP incoming trunk

```
[general]
Trunk Name: ovh-in (for example)

[Outgoing Settings]
```

Trunk Name: ovh-in (for example)

PEER Details:

type=peer

host=sipx.ovh.fr

username=00339xxxxxxx

fromuser=00339xxxxxxx

[Registration]

Register String: 00339xxxxxxx:password@sipx.ovh.fr/00339xxxxxxx

SIP outgoing trunk

[general]

Trunk Name: ovh-out (for example)

[Outgoing Settings]

Trunk Name: ovh-out (for example)

PEER Details:

type=peer

host=sipx.ovh.fr

username=00339xxxxxxx

fromuser=00339xxxxxxx

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

<https://wiki.voximal.com/doku.php?id=voipproviders:dbl&rev=1467736900>

Last update: **2016/07/05 16:41**

