

DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter *01 to know the IP address.
- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).



The screenshot shows the 'EasyPhone GoIP4' web interface. On the left is a navigation menu with 'Status' selected, containing links for Summary, General, GSM, SIM Call Forward, Configurations, and Tools. The main area displays a 'Summary' table with 13 columns: Line, M, SIM, GSM, VOIP, Status, SMS, RSSI, Carrier, BST ID, Idle, Remain, and Reset. The table contains 5 rows of data for lines 1-4 and an 'ALL' row. Line 1 is active (Y) with status IDLE and 14 SMS. Lines 2-4 are inactive (N) with status IDLE and 99 SMS. All lines have an idle time of 1234 and 'NO LIMIT' remain. Each row has a 'Reset' button. The top right corner has a '简体中文' (Simplified Chinese) link.

Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	Reset
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	Reset
3	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
4	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
ALL												Reset

- Set Basic VOIP setting



The screenshot shows the 'EasyPhone GoIP4' web interface. On the left is a sidebar menu with options: Status, Configurations, Preferences, Network, Basic VoIP, Advance VoIP, Media, Call Out, Call Out Auth, Call In, Call In Auth, SIM, SIM Forward, IMEI, SMS, GSM Carrier, GSM Base Station, and Tools. The 'Configurations' section is active, showing a 'SIP' configuration form. The form includes fields for Config Mode (Single Server Mode), Phone Number (goip), Display Name, Authentication ID (goip), Password (****), SIP Proxy, SIP Registrar (192.168.1.17), Re-register Period (s) (10), Outbound Proxy, Home Domain, Backup Server (radio buttons for Enable/Disable), Routing Prefix (radio buttons for Line1, Line2, Line3, Line4), and Line 1 Routing Prefix. A 'Save Changes' button is at the bottom of the form.

- **Configuration :**

SIP incoming trunk

```
[general]
Trunk Name: ovh-in (for example)

[Outgoing Settings]

Trunk Name: ovh-in (for example)
PEER Details:
  type=peer
  host=sipx.ovh.fr
  username=00339xxxxxxx
  fromuser=00339xxxxxxx
[Registration]

Register String: 00339xxxxxxx:password@sipx.ovh.fr/00339xxxxxxx
```

SIP outgoing trunk

[general]

Trunk Name: ovh-out (for example)

[Outgoing Settings]

Trunk Name: ovh-out (for example)

PEER Details:

type=peer

host=sipx.ovh.fr

username=00339xxxxxxxx

fromuser=00339xxxxxxxx

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

<https://wiki.voximal.com/doku.php?id=voipproviders:dbl&rev=1467755710>

Last update: **2016/07/05 21:55**

