

DBL Technology Voip/GSM gateways

- **Web site** : <http://www.dbltek.com/>

DBL Technology Ltd. is a leading company in developing and manufacturing advanced voice over IP (VoIP) solutions for the worldwide market. We are dedicated in the development of the latest VoIP technologies, and more than 10 years in developing a wide range of IP Phones and Gateways. The offering of high quality, innovation, affordability and flexibility inside each and every single one of our products is our commitment to you.

- **Installation** :

- Insert a SIM card and connect the Gateway to your router.
- Call the SIM number and enter *01 to know the IP address.
- Open your web browser and set the IP to access to the configuration interface (the default user/password are admin/admin).



The screenshot displays the 'EasyPhone GoIP4' web interface. On the left is a navigation menu with options: Status, Summary, General, GSM, SIM Call Forward, Configurations, and Tools. The 'Status' section is active, showing a 'Summary' table. The table has 13 columns: Line, M, SIM, GSM, VOIP, Status, SMS, RSSI, Carrier, BST ID, Idle, Remain, and Reset. It contains 5 rows of data for lines 1 through 4, plus an 'ALL' row. Each row has a 'Reset' button in the final column. The top right of the interface shows '简体中文'.

Line	M	SIM	GSM	VOIP	Status	SMS	RSSI	Carrier	BST ID	Idle	Remain	Reset
1	Y	Y	Y	N	IDLE	N	14	Orange F		1234	NO LIMIT	Reset
2	N	N	N	N	IDLE	N	99			1234	NO LIMIT	Reset
3	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
4	N	N	N	N	IDLE	N				1234	NO LIMIT	Reset
ALL												Reset

- Set Basic VOIP settings

EasyPhone

GoIP4

简体中文

Status

Configurations

Preferences

Network

Basic VoIP

Advance VoIP

Media

Call Out

Call Out Auth

Call In

Call In Auth

SIM

SIM Forward

IMEI

SMS

GSM Carrier

GSM Base Station

Tools

SIP

Config Mode

Single Server Mode

Phone Number

goip

Display Name

Authentication ID

goip

Password

SIP Proxy

SIP Registrar

192.168.1.17

Re-register Period (s)

10

Outbound Proxy

Home Domain

Backup Server

Enable

Disable

Routing Prefix

Line1

Line2

Line3

Line4

Line 1 Routing Prefix

*Auto Config Other lines

Save Changes

- Set Call out settings

- **Configuration :**

SIP incoming trunk

```
[general]
Trunk Name: ovh-in (for example)

[Outgoing Settings]

Trunk Name: ovh-in (for example)
PEER Details:
  type=peer
  host=sipx.ovh.fr
  username=00339xxxxxxxx
  fromuser=00339xxxxxxxx
[Registration]

Register String: 00339xxxxxxxx:password@sipx.ovh.fr/00339xxxxxxxx
```

SIP outgoing trunk

[general]

Trunk Name: ovh-out (for example)

[Outgoing Settings]

Trunk Name: ovh-out (for example)

PEER Details:

type=peer

host=sipx.ovh.fr

username=00339xxxxxxxxx

fromuser=00339xxxxxxxxx

From:

<https://wiki.voximal.com/> - **Voximal documentation**

Permanent link:

<https://wiki.voximal.com/doku.php?id=voipproviders:db1&rev=1467755985>

Last update: **2016/07/05 21:59**

