Version 1.0.121

18 Oct 10:10:40

Login

After installation there are 3 default login accounts, with differents access permissions

- **user** : access to Voximal configuration and reports.
- admin : user access and network configuration
- root : full access (full freePBX features).

Each login have a default password (requested after the package installation, or the image activation), you can be change them with the root account.

Voximal Web Configuration



voximal

Access


the web interface, open the link

http://your_server_address/admin.

All the configuration is managed throw a web interface based on the FreePBX project. To access to

It's protected by a login (the first login after the installation will request you a password).



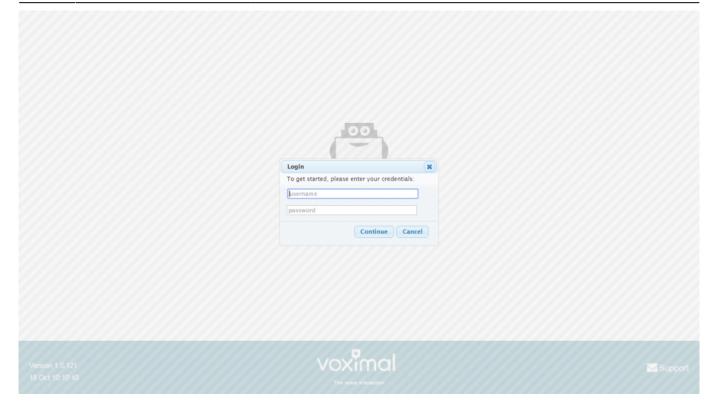

System Status

The home page after login show you the system status.

- Host name of the server
- Summary : Main modules status
- Interpreter statistics
- Telephony statistics
- Uptime / Load average

Voximal Connectivity ♥ Reports ♥	Settings V Apply Config					Logout	adm in	Langua
System O	verview	0		Telep	phony Statistics		0	
Welcome to	ivr.ulex.fr		Telephony -	Trunks Reged	Trunks Offline	 Active Calls 		
Summary	Sysinfo updated 1 seconds ago		Uptime 🕶					
Telephony 🗸 Database 🗸	System Alerts		CPU -				4.8	
Web Server Interpreter	No critical issues found							
Interpreter 🗸			Memory -				3.2	
There are 10 bad destinations	c		Disk 🕶				1.6	
Show	All		Network +				0	
Interpreter	Statistics	C			Uptime		2	
Sessions		System Last Rebooted						
Pending 0			1 day, 1 hour, 11 minutes, 33 seconds, ago					
Peak 1	A Mar Duration Of	- 11						
Opened: 6 Error: 0 Refused: 0 Max Duration: 81s			Load Averages					
Average Counters			0.10 1 Minu		0.03 5 Minutes	0.01 15 Minutes		
Sessions	0.	.00						
Duration: 33.50 Response:	0.33 CAPS: 0.00							

Main configuration steps

To configure the Voximal IVR you have 4 steps to do :

- 1. Configure the VoIP telephony access (SIP accounts)
- 2. Create/edit a VoiceXML service (Create a VoiceXML service)
- 3. Create Voximal accounts (Voximal accounts)
- 4. Configure the relation between the DID and the VoiceXML service you want to use (Routes configuration)

Note: On each configuration page, don't forget to click on **[Submit]** button at the bottom page before changing page. If you don't click on **[Submit]** you'll lose all your changes.

Note: All changes are not directly configure on the server. After one change, you'll see a button **[Apply Config]** in menu. To activate the changes on server <u>you have to click on</u> **[Apply Config]**.

1) Configure the telephony access

a) Use the test number and the PIN

If your server is connected to the internet you can use the free test access to place calls to your server. There is nothing to do. You should only check that the port 4569 is open from/to internet in UDP.

=== b) Connect a trunk SIP

You can create a SIP trunk with an operator with the page Voip Providers. You have to enter informations :

- A trunk name : a string to identify you accounts
- The peers details : enter all trunk informations (host, username, password, type)

```
host=myprovider.com
username=0033123456789
type=peer
```

• Register informations : enter registry informations like :

```
0033123456789:password@myprovider.com/33123456789
```

• Click on [submit] button (don't remember to apply your modifications)



c) Add an extension

After you setup your Voxibot, the first thing you do is to add extensions (connect a Phone). The integrated FreePbx allows you to add a couple of different Device types

- Generic SIP Device
- Generic IAX2 Device
- Generic DAHDi Device
- Other Custom Device

Among these types, SIP device is the most common and popular one.

You can give your extension any unique number, Display Name, password, whether allow this extension to accept inbound external calls or can make outbound external calls. can have voicemail or not etc.

5/9

2) Create a VoiceXML service

You need to create VoiceXML service, by uploading it or writing it directly with the embedded VoiceXML/PHP editor. Select the application menu **Voximal**.

Uploading VoiceXML service

rectory: / var / w	ww / html / vxr	ml 🥒		
Filename	Туре	Size (bytes)	Date Modified	
messaging.tgz	TGZ File		Aug 19 2015 3:53 PM	
dem o.tgz	TGZ File	137,915	Aug 17 2015 9:50 AM	
vernai	<directory></directory>		Feb 8 2016 9:26 AM	
messaging	<directory></directory>		Oct 29 2015 2:36 PM	
app1	<directory></directory>		Jun 25 2015 5:56 PM	
campaign	<directory></directory>		Apr 26 2016 4:58 PM	
tests	<directory></directory>		Mar 9 2016 10:45 PM	
helloworld	<directory></directory>		Apr 27 2016 10:07 AM	
helloworld.vxml	VXML File	536	Oct 14 2016 11:05 PM	
demo	<directory></directory>		Oct 10 2016 5:17 PM	
demo	<directory></directory>		Oct 10 2016 5:17 PM	

In page Applications/Voximal click on **Editor** tab. At the end of the page, you have the way to upload files :

- Click on **Browse** and select your files (.vxml, .php, ...).
- Then click on **[Upload]**. Your files will appear in list.

Create VoiceXML service with editor

You can update VoiceXML file (extension .vxml), by clicking on the filename. The file content will appear, and you'll be able to update it, and check the syntax.

The editor page allow to create folders and files, and edit them.

To create folders or files, click on right items on top right corner (Create Directory or Create File).

Then enter filename, and click [Create].

<pre>Swe _ tak _ Check</pre>	Voximal Connectivity V Reports V Settings V Apply Config	Logout: admin	Language ⊽
<pre> (xml version="1.0"}> (xml version="2.0" xmlns="http://www.w3.org/2001/vxml" xml:lang="en-US"> (var name="caller" expr="session.connection.remote.uri"/></pre>	Accounts Editor		
	<pre>1 <?xml version="1.0"?> 2 <vxml version="2.0" xml:lang="en-US" xmlns="http://www.w3.org/2001/vxml"> 3 <form> 4 <block> 5 < <var expr="session.connection.remote.uri" name="caller"></var> 6 <var expr="session.connection.local.uri" name="called"></var> 7 <var expr="telephone.id" name="idi"></var> 8 <pre>var name="ralled" expr="telephone.id"/> 9 <pre>cyprompt> 10 Welcome. You are on the Voximal IVR. 11 Your caller number is : <value expr="called"></value>. 12 You are calling the : <value expr="called"></value>. 13 Goodbye 14 <</pre>/prompt> 15 </pre>// </block></form></vxml></pre>		,
Version 1.0.121 18 Oct 10:10:36 The voice interaction	18 Oct 10:10:36		Support

3) Create a Voximal account

When your VoiceXML services is ready, you have to configure it in the server. To do it, add Voximal account. Select the **Voximal** menu item.

To create a Voximal Account, you have to define in minimum 2 required informations :

- 1. An application name, in field Name
- 2. The VoiceXML url of the service, in field **URL**. You can select a local one, in the list or writing a local or HTTP one.

There are several options :

- 1. **Max sessions** : you can define a specific limit, if you want lower maximum session than the license.
- 2. **Dial format** : you can define a specific dialout format for outgoing calls.
- 3. Mark : you can define a specific mark, that will appear in traces.
- 4. **Speech** : you can specify the use of the ASR. In case of using ASR server, the better way is to set **Automatic** choice.
- 5. **Max time** : you can set a maximum duration of call. If not setted or equals to 0, the duration is unlimited.
- 6. **Vxml parameter** : you can set a string to pass it to vxml script.
- 7. Start delay : you can set a time delay to start the service.

Voximal Connecti	vity ♥ Reports ♥ Settings ♥ Apply Config	Logout: admin Language V
Voximal Applica		
Add Application	* can not be left in blank.	Add New Application Campaign Demo HelloWord
Name [*] [©] URL* [©] Max Sessions [©]	Select •	messaging-consult messaging-depot Saasivr SiteVernai Tests
Dial Format [®]		Voximal_Access
Speech [®] Max time (s) [®]	Emulation No Yes Automatic	
Session parameter ² Start delay (ms) ²	2000	
Create	•	

4) Number/Routes configuration

You have to define which application you want to use by default for all incoming calls.

It's done by defining the any DID/any CID or All DIDs settings in Connectivity/Numbers page.

- 1. Select **All DIDs** item (on top right corner)
- 2. Leave empty Field DID Number
- 3. Select the application to use : Voximal Application
 - You can select an existing application
 - Or create a new one by clicking "Add new Voximal application"
- 4. Click on **[submit]** button.

Last update: 2016/10/25 installation_guide:configuration:start https://wiki.voximal.com/doku.php?id=installation_guide:configuration:start&rev=1477429418 21:03

Voximal Connectivity ⊽ Reg	orts V Settings V Apply Config	Logout: admin Langu
dd Incoming Route		Add Incoming Route
du meening route		All DIDs (toggle sort)
dd Incoming Route		User DIDs
g		General DIDs
escription ¹		Unused DIDs
escription •:		any DID / any CID
D Number ¹		12345
		test / any CID
llerID Number ¹⁰ :		Demo 01 / any CID
District Days 9		Echo Test
) Priority Route ¹⁰ :		700 / any CID
tions		Goldorak
		0034911413999 / any CID HelloWorld
rt Info 🕫:		8965 / any CID
n mo		Tests
) name prefix ¹⁰ :		00 / any CID
		Voximal Demo
nal RINGING ¹		33972538733 / any CID Voximal Test
ect Reverse Charges ⁰ :		0033972538823 / any CID
use Before Answer ¹⁰ :		
vacy		
vacy Manager 🕫	No •	
I Recording		
Il Recording 0.	Allow	
all Recording ¹	Allow	

Call Detail Record

eports									
Call Detail Record Search									
Order By			Search	conditions					
Call Date Call Date	From: 01 Oct	tober 🔻 2016 🕶 0	0: 00 то: 31	October	▼ 2016 ▼	23:59			Extra options
CallerID Number 0;		Not: 🗐 Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			CDR search
CallerID Name 0:		Not: Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			🗌 : Call Graph
Outbound CallerID Number	k.	Not 🗐 Begi	ns With: 🖲 Con	tains: O Ends	With: Castly:	0		Result limit :	100
		Not 🗐 Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			
Destination 0:		Not 🗐 Begi	ns With: 🖲 Con	tains: 🔍 Ends	With: Casetly:	0			
Destination CallerID Name		Not 🗆 Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			
Userfield 🛛		Not: Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			
CAccount Code 2:		Not: Begi	ns With: 🖲 Con	tains: O Ends	With: CExactly:	0			
Duration 0:	Between:	And: Seconds							
Disposition 0:	All Disposition	ns 🔻 Not: 🔲							
Newest First *	Group By: Day		•		Search				
		Call Detail	Record - Se	earch Retu	rned 100 Cal	ls			
Call Date Recording	System Caller	rID Outbound CallerID	DID	Арр	Destination	Disposition	Duration	Userfield	Account 🦛
2016-10-18 00:21:13 147	76742873.238 "Borja SIX" <11>	TO " "Borja SIXTO " <11>		Dial	0170613300	ANSWERED	01:31		
00:21:13	"Boris CIV	TO" "Borja SIXTO" <11>		Dial	0170613300	ANSWERED	00:38		
	76742106.222 "Borja SIX" <11>	<11>							
2016-10-18 00:08:26 147	76742106.222 <11> 76741755.206 "Borja SIX" <11>			Dial	0170613300	ANSWERED	00:46		
2016-10-18 147 00:08:26 147 2016-10-18 147	4112	TO " "Borja SIXTO " <11>		Dial	0170613300	ANSWERED	00:46		

Logs

o Voximal Connectivity ⊽ Report	s V Settings V Apply Config	Logout: admin	Language ⊽
Voximal Log Files			
voximal-debug 1000	Show		
			_
Here the logs:			î
Oct 17 11:32:50.74 0xb699eb70 0_1 40 Oct 17 11:32:50.74 0xb699eb70 0_1 40 Oct 17 11:32:50.74 0xb699eb70 0_1 40 Oct 17 11:32:50.74 0xb699eb70 -1 400	0) SBjslEvallentering: 0xb5cc07bB, 'dialog.MyCallf.duration = 0;' 0 JSiCOtext:EVallEvaluation of dialog.MyCallf.duration = 0;, context 0xb5ca7a00 2 AccessBegin Lock 2 AccessBegin Locked		
Oct 17 11:32:50.74[0xb699eb70]-1]400	2 AccessEnd Unlock		
Oct 17 11:32:50.74 0xb699eb70 0_1 40 Oct 17 11:32:50.74 0xb699eb70 0_1 60	00 SBjsiEval exiting: returned 0 00 VXIrecHotwordTransfer entered.		
Oct 17 11:32:50.74 0xb699eb70 0_1 60 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIrecHotwordTransfer return: rc = 0 00 VXItelGetStatus Session status 1 = active		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 TransferBridge: dial:IAX2/access:27b3ec7a@13.92.253.0/8965		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 Dump properties ! 00 VXIMap :: absoluteURI(string) = http://lic1.voximal.net/licenser/vxml/index.php?page=dial		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	<pre>00 VXIMap :: base(string) = http://lic1.voximal.net/licenser/vxml/index.php?page=dial</pre>		
Oct 17 11:32:50.74 0xb699eb7010_1170	00 VXIMap :: encoding(string) = UTF-8		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: audiofetchhint(string) = prefetch 00 VXIMap :: bargein(string) = true		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: bargeintype(string) = speech		
Oct 17 11:32:50.74[0xb699eb70]0_1]70	00 VXIMap :: confidencelevel(string) = 0.5		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: documentfetchhint(string) = safe 00 VXIMap :: fetchaudiodelay(string) = 2s		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: fetchaudiominimum(string) = 5s		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 [VXIMap :: fetchtimeout(string) = 7s		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: grammarfetchhint(string) = prefetch 00 VXIMap :: inputmodes(string) = dtmf voice		
Oct 17 11:32:50.74[0xb699eb70[0_1]70	00 VXImap :: inputanoues(string) = dtml voice		
Oct 17 11:32:50.74 0xb699eb70 0 1 70	00 VXIMap :: maxnbest(string) = 1		
Oct 17 11:32:50.74 0xb699eb7010_1170	00 VXIMap :: objectfetchhint(string) = prefetch		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: scriptfetchhint(string) = prefetch 00 VXIMap :: sensitivity(string) = 0.5		
Oct 17 11:32:50.74 0xb699eb7010 1170	00 VXIMap :: Scholvery(string) = 0.5		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: termchar(string) = #		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: termtimeout(string) = 0s		
Oct 17 11:32:50.74 0xb699eb70 0_1 70 Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXIMap :: universals(string) = none 00 VXIMap :: vxi.tel.connecttimeout(integer) = 25000		
Oct 17 11:32:50.74[0xb699eb7010 1170	00 tyanap var.tertonneotormeout(integer) = 2000		
Oct 17 11:32:50.74 0xb699eb70 0 1 70	00 VXItelTransferBridge dest = dial:IAX2/access:27b3ec7a@13.92.253.0/8965		
Oct 17 11:32:50.74 0xb699eb70 0_1 70	00 VXItelTransferBridge connecttimeout = -1242611640		-
(· · · · ·
ersion 1.0.121	Voximal		
151011 1.0. 121	VOAIITIQI		Support

Settings

The home page after login show you the system status.

- Host name of the server
- Summary : Main modules status
- Interpreter statistics
- Telephony statistics
- Uptime / Load average

Configuration files

- /etc/voximald.conf (not modify this file)
- /etc/asterisk/voximal.conf (not modify directly this file)

From: https://wiki.voximal.com/ - Voximal documentation

Permanent link: https://wiki.voximal.com/doku.php?id=installation_guide:configuration:start&rev=1477429418

Last update: 2016/10/25 21:03

